






# Arris™ Technical Specification Robe Hook YB0803

## **Stock Numbers:**

- □ YB0803BN Robe Hook Brushed Nickel Finish
- □ YB0803CH Robe Hook Chrome Finish

## **Dimensions:**

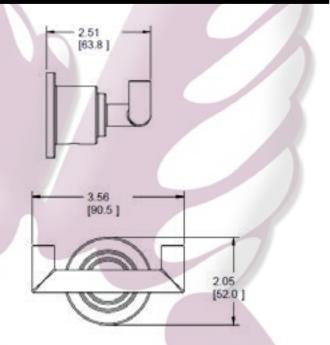

#### **Materials:**

Robe Hook is constructed of zinc.

### **Installation Instructions:**

- 1. Remove mounting plate from the product post by loosening each setscrew
- Position the mounting plate on the wall at desired location with "UP" facin you. Mark hole locations.
- 3. Drill 2 holes as marked using 5/16" drill bit.
- Fold ends of the plastic toggle anchor together and insert into each hole i the wall.
- 5. Lightly tap anchors until flush with the wall.
- 6. One at a time, insert plastic pin into each anchor and lightly tap to activat anchor. Removepin and repeat on other anchor.
- Place the mounting plate on the wall over the installed wall anchors with "UF facing you.
- 8. Tighten screws.
- Place decorative product over the mounting plate with setscrew facing dow and tighten setscrew.

#### Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number: \_\_\_\_\_Robe Hook
By Creative Specialties

