# **ALIGN™** Technical Specification

## **Pivoting Paper Holder**

YB0408


### **Stock Numbers:**

- ☐ YB0408CH- Robe Hook Chrome Finish
- ☐ YB0408BN- Robe Hook Brushed Nickel Finish
- ☐ YB0408BL- Robe Hook
  Matte Black Finish
- ☐ YB0408BG- Robe Hook
  Brushed Gold Finish

**Materials:** 

**Pivoting Paper Holder** is constructed of zinc.

### **Dimensions:**

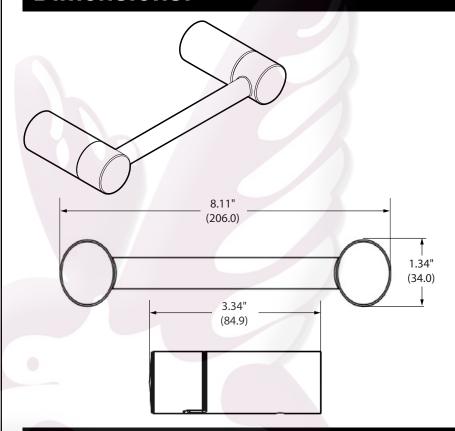

### **Installation Instructions:**

- 1. Position the mounting template on the wall in the desired location.
- 2. Using a level, align the template and tape it to the wall.
- Drill two 1/4" holes at each mounting post location that corresponds to your product. (We recommend using the horizontal holes for drywall installation).
- 4. Remove the template from the wall.
- 5. Lightly tap anchors until flush with the wall.
- Remove mounting posts from the product assemblies by loosening each setscrew.
- 7. One at a time, place each mounting post over anchors (notching facing downward) and insert screws through post into anchors.
- Tighten screws.

# **Cleaning Instructions:**

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

**Stock Number:** \_\_\_\_\_YB0408 Pivoting Paper Holder By MOEN



