

Iso™ Technical Specification

Soap Dish & Toothbrush Holder/Tumbler


DN0744 & DN0745

DN0766

Stock Numbers:

- ❑ **DN0744CH** – Toothbrush Holder/Tumbler
Chrome Finish
- ❑ **DN0744BN** – Toothbrush Holder/Tumbler
Brushed Nickel Finish
- ❑ **DN0745CH** – Toothbrush Holder/Tumbler
Chrome Finish
Glass Tumbler
- ❑ **DN0766CH** – Soap Dish
Chrome Finish
- ❑ **DN0766BN** – Soap Dish
Brushed Nickel Finish

Dimensions:

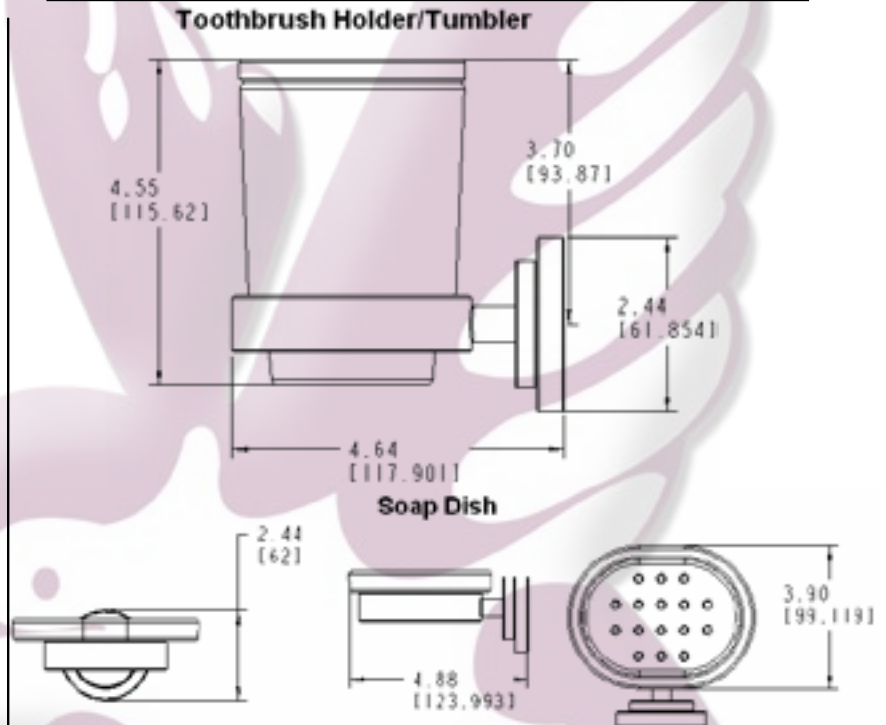

Materials:

Toothbrush holder/Tumbler and Soap dish posts are constructed of zinc. DN0744 tumbler is constructed of plastic. DN0745 tumbler is constructed of glass. DN0766 dish is constructed of plastic. DN0767 dish is constructed of glass.

Installation Instructions:

Directions below are for installation into drywall. If installing product into a stud, use the wood screws only.

1. Remove the mounting posts from the product assemblies by loosening each setscrew.
2. Position the mounting plate on the wall at desired location with "UP" facing you. Mark hole locations.
3. Drill two holes as marked using a 5/16" drill bit.
4. Fold ends of the plastic toggle together and insert into each hole in the wall.
5. Lightly tap anchors until flush with the wall.
6. One at a time, insert plastic pin into each of the anchors and lightly tap to activate anchor. Remove pin and repeat on the other anchors.
7. Place the mounting plate on the wall over the installed wall anchors with "UP" facing you.
8. Tighten screws.
9. Please decorative product over the mounting plate with the setscrew facing down. Tighten setscrew.

